

(1) First, Remove all the handles and place them in a safe place;




(2) open the shell on the back of the machine (AS picture, video shown) (Hold the white clasp A by your hand and pull it out)



(3) Check the position of the Yag power supply: If it is on the right side, remove the right side of the case:





(4) Remove the right housing, you can see the Yag power position: As shown as the follow picture:

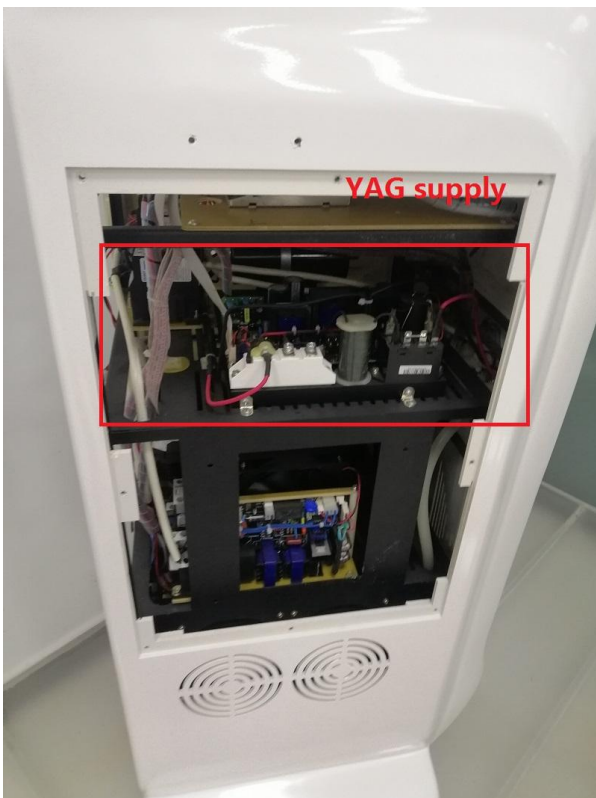

(5) Now I'll show you how to remove the power supply of YAG:

- ① First remove the A1 / A2 / A3 / A4 screws. Special tips: when removing the A3 and A4 screws, put another hand under the screws to prevent it from falling into the machine;
- ② Mark the positions of B1, B2, B3, B4 and B5 with labels (it is recommended to take pictures and videos at the same time), and then pull them off (remember: study how to remove them and don't break the line)

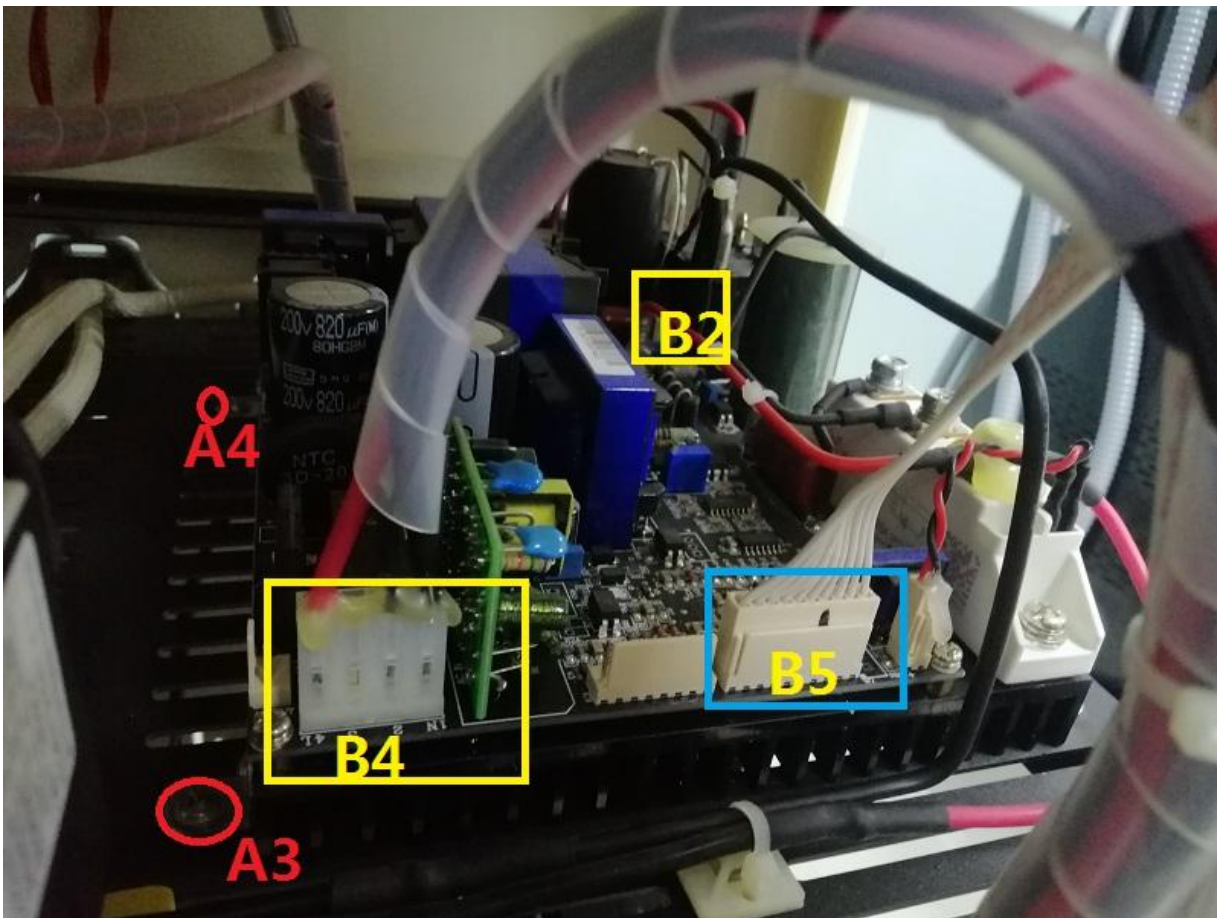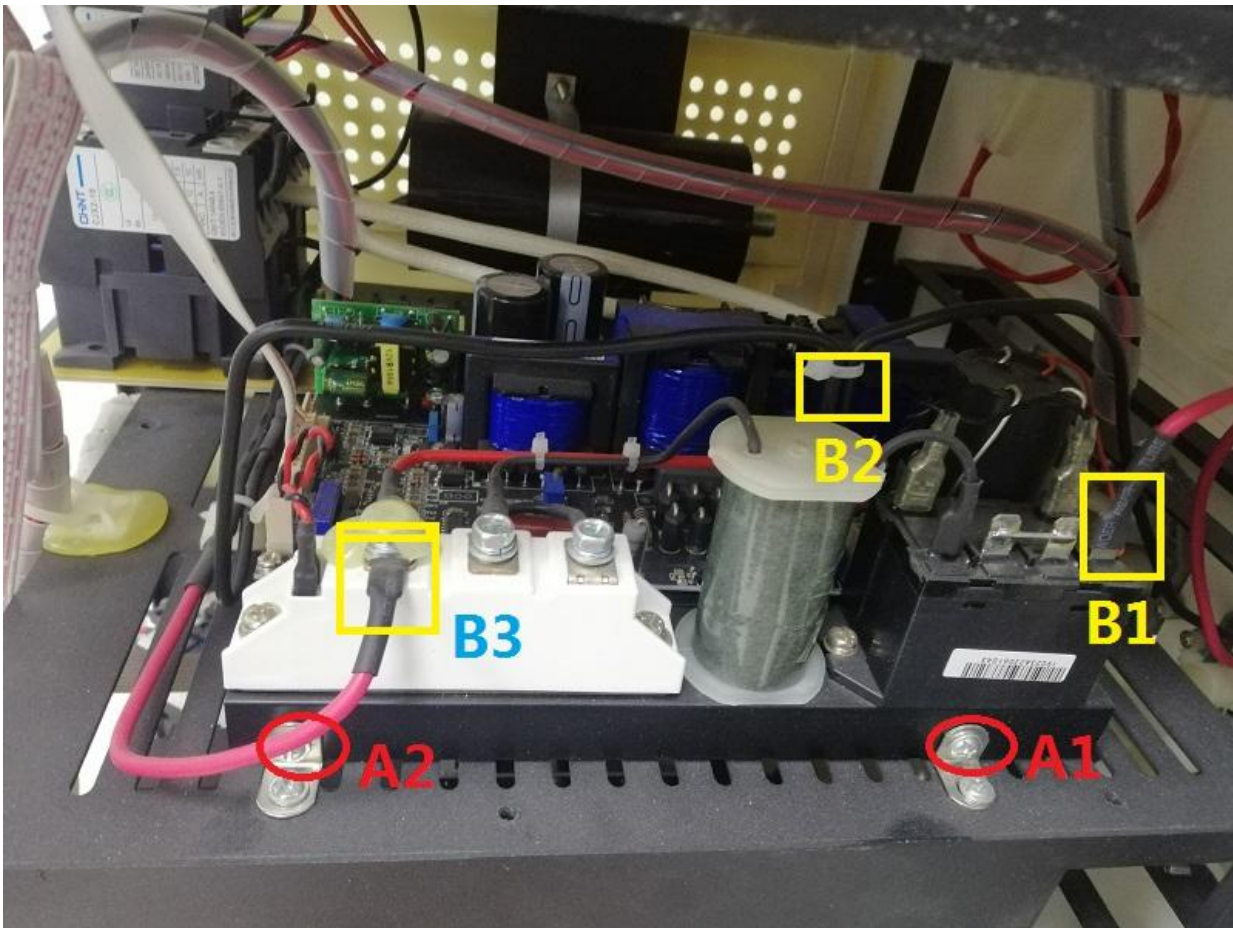

(6) Reinstall the new power supply, After installation, take a video and let me check whether the line is correct.